



CMD-100
All pictures shown are for illustration purpose only,
actual products may vary,
图片仅供参考, 实物为主,
图片仅供参考, 实物为主。

 
EN User Guide

User Guide


Thank you for purchasing the Lifetrons® product. This user guide outlines the operating procedures and safety precautions. Please read it carefully to make sure you are using your product properly and read it for future reference.

How to Use


A. Cleaning Skin with Vibration Mode
1. Turn the device on and choose your desired Intensity level setting. Gently use the cleaning head ➊ onto your skin to start facial cleansing.

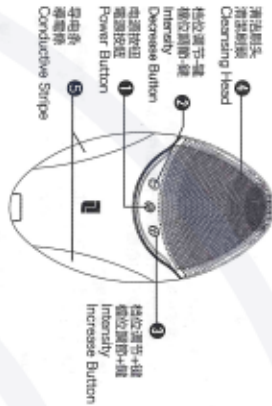

B

 

C

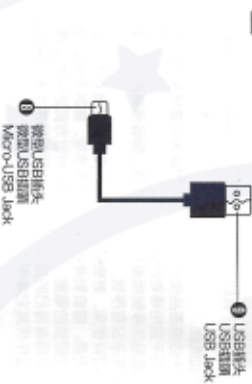 

ion mode (green light will appear).
5. Choose your desired Intensity level setting. Gently press the massage head ➊ onto your skin to start facial treatment.
Note: Always use on clean skin. For best results, use up to 4 times a week for 3 minutes per session.

E. Cleaning the Device
1. When the brush surface with water and mild soap, then rinse with clean water. Wipe dry with a clean, soft cloth or towel.

Note: Do not use cleansers that are clay-based, silicone-based, gritty or exfoliating scrubs which could damage the device. The charging port underneath the cap is not water resistant. Please make sure the cap is always tightly sealed during use.

Recharging the Device
1. Open the USB port of the bottom. Connect part ➊ (Micro-USB plug) to part ➋ (Micro-USB port).
2. Connect part ➌ (USB plug) to a USB port with power supply (e.g., AC adapter with USB power supply).
3. Place the USB cover back onto the device once charging is completed.

LED Indicator
Low battery: Red LED light flashes once per second (only visible when power is on).
When charging: Solid red LED light appears.
Battery fully charged: Solid green LED light appears.

简中使用手册

感谢您购买 Lifetrons® 产品。本指南概述了操作方法和安全守则。请仔细阅读以正确使用产品。请妥善保管本手册以备将来参考之用。

如何使用

A. 洁面刷头配合震动模式
1. 清洁面部, 选择理想的强度级别。轻压刷头 ➊ 于皮肤, 开始面部清洁。

强度级别设置
1. 按住电源按钮 ➊ 两秒。启动。默认为第3档 (蓝色指示灯)。
2. 按一下 ➋。切换到2档 (淡蓝色指示灯)。
3. 按一下 ➋。切换到1档 (绿色指示灯)。
4. 按一下 ➋。切换到4档 (棕色指示灯)。
5. 按一下 ➋。切换到5档 (红色指示灯)。
6. 按住电源按钮 ➊ 两秒。电源关闭 (蓝灯闪烁3次后熄灭)。

注意:
1. 使用前请洗手和脸。使用时配合清水或洁面产品。
2. 请勿使用含有酒精、汽油或丙酮的产品。避免刺激皮肤。
3. 连续使用3分钟后, 仪器会自动关闭。使用期间仪器会暂停两次 (每30秒一次) 提醒您使用的时间。如果超过规定使用时间, 按住 ➊ 两秒, 即可关闭电源。

B. 电子离子刺激 (EMS) + 负离子/正离子模式
1. 开机状态下, 连续按下 ➊。
2. 握住仪器, 使手指接触到侧面的导电条 ➋ 以启动负离子/交替模式 (蓝色指示灯)。持续使用3分钟后自动关闭。
3. 轻压按摩头 ➌ 于皮肤, 开始面部按摩。

C. 电子离子刺激 (EMS) + 正离子模式
1. 开机状态下, 连续按下 ➊。
2. 握住仪器, 使手指接触到侧面的导电条 ➋ 以启动 EMS+正离子模式。
3. 按一下 ➋。切换到1档 EMS+正离子模式 (红色指示灯)。
4. 按一下 ➋。切换到2档 EMS+正离子模式 (绿色指示灯)。
5. 选择适当的强度, 轻压按摩头 ➌ 于皮肤, 开始面部按摩。

D. 电子离子刺激 (EMS) + 负离子模式
1. 开机状态下, 连续按下 ➊。
2. 握住仪器, 使手指接触到侧面的导电条 ➋ 以启动 EMS+负离子模式。
3. 按一下 ➋。切换到2档 EMS+负离子模式 (淡蓝色指示灯)。
4. 按一下 ➋。切换到1档 EMS+负离子模式 (绿色指示灯)。
5. 选择适当的强度, 轻压按摩头 ➌ 于皮肤, 开始面部按摩。

注意: 请在清洁的皮肤上使用。要达到良好效果, 建议每周使用4次, 每次3分钟。

E. 洁面刷头加水清洗刷头
1. 用温水和洁面皂加水清洗刷头, 再用清水洗净。用天丝布或毛巾擦干。

注意: 粘土、硅胶、磨砂状清洁产品或磨砂膏可能会堵塞设备。请勿使用。保护盖下的充电接口不防水。使用前请确保盖子已盖紧。

F. 充电
1. 打开USB保护盖, 连接 ➊ (微型USB插头) 与 ➋ (微型USB接口)。
2. 连接 ➌ (USB插头) 到有电源供应的USB接口 (例如: 有USB电源供应的充电器)。
3. 充电完成后将盖子盖回。

G. LED指示灯
电量低: 红色LED指示灯每秒钟闪烁一次 (仅在仪器开启状态下)。
充电中: 红色LED灯亮起。
电池充电完成: 绿色LED灯亮起。

Safety Precautions

- Please follow the rules outlined in this guide closely to ensure your safety and flawless operation.
- Do not use any kind of liquid to clean the product. Keep in mind that the surface of the product should only be wiped with a clean dry cloth.
- When cleaning, do not use any corrosive solution which may cause damage to the appearance.
- Repair, disassembly or modify of this product is strictly prohibited. Improper handling may result in short circuits, product damage or even fire. Maintenance and warranty services will be void if unauthorized changes have been made to the product. Please contact an authorized dealer to obtain after-sales service if the product has a problem.
- Be cautious of any edges, uneven surfaces, metal parts, accessories or packaging to prevent possible injury or damage. Take note that this product should not be placed in your mouth.
- Do not use this product in locations with high temperatures or high humidity levels (e.g., bathroom). Ideally, the product should be used in a location free of excessive dust and not exposed to direct sunlight, the or similar overheating environment.
- Do not use the product after use, store it in a place with less dust, and do not expose it to overheating environment, such as sunlight, fire, or the similar environment.
- This product is not waterproof, do not insert foreign objects or liquids into the product, this may damage the product, cause an explosion or fire.
- Please try to avoid falling, collision or being over-pressurized. Please put this product as light as possible.
- Do not place the product near strong magnetic or electric fields, this may cause product failure to occur.
- Do not use this product in hazardous locations.
- The product may explode if discarded in a fire.

Children

Keep out of reach of children. Do not allow children to play with your product or its accessories. They could hurt themselves or others and could accidentally damage the product. Your product and its accessories may contain small parts that could become detached and create a choking hazard.

Disposal of Electrical and Electronic Equipment

The symbol indicates that all electrical and electronic equipment included with this product should not be treated as household waste.

Instead, it should be left at the appropriate collection point for the recycling of electronic equipment. By ensuring the product is disposed of correctly, you are helping to prevent negative consequences for the environment and human health. To recycle this product, please contact your local city office, environmental protection agency, household waste disposal service or where you purchased the product to

learn more about appropriate recycling methods.

Unified Warranty and Support Service

The product is guaranteed for 12 months. If during the warranty period, the product needs to be repaired or replaced due to defects in design, material or process under normal use and service conditions, but excluding natural disasters and man-made instrument damage, we will decide on the following terms:

1. The original invoice or sales receipt with the date of purchase is presented with the defective unit.
2. Uletrons will not compensate you for the cost of data.
3. If you need to repair this product, you must present the original purchase certificate provided by Uletrons authorized distributor for the purchaser. Uletrons reserves the right to refuse the warranty if the warranty is expired or altered after the purchase of this product.
4. The warranty does not cover product failures which have been caused by use of accessories or other peripheral devices which are not Uletrons brand original accessories provided for use with the product. The warranty does not cover any damage caused by misuse, abuse, neglect or accidental breakage.
5. The warranty does not cover any failures caused by modification, repair or disassembly by any unauthorized person.
6. Any defective units or parts shall become property of the manufacturer.

Additional Terms

1. Failure and damage caused by improper use which is not according to the product instructions manual or according to the instructions.
 2. The original serial number of the product is marked with alteration, replacement or tear marks of the product has no serial number.
 3. Misuse, brutal use, accident, improper operation or storage, damages, unauthorized modification or repair of the product, incorrect installation, incorrect connection voltage, excessive external or electrical damage, user's own error, failure to operate in accordance with instructions manual or any other non-Pan'y A's fault.
- The operations as above, which cause product failure and damage don't fall within the scope of warranty.

Additional Information

Please visit our website www.uletrons.com or contact our customer service center at cs@uletrons.com to learn more about our new products and special offers.

This user guide was originally composed in English and was subsequently translated into other languages. The fidelity of subsequent translations cannot be guaranteed. In case of conflict between the English version and another language version, the English version takes precedence.

Product specifications are subject to change at the sole decision and discretion of Uletrons, Uletrons Switzerland

AG Uletrons International Ltd, Dongguan U-tek Electronics Technology Co., Ltd, Dongguan U-tek Biologic Cosmetics Co., Ltd and Uletrons Switzerland Holdings Limited without prior notice. Any devices or accessories not listed under "What's Inside" are in reference to compatibility only and are not included. Product images are for reference purposes only/color may vary from the actual product.

"ULETRONS", "ULETRONS", "U-FIT" are trademarks or registered trademarks owned by Uletrons, Uletrons Switzerland AG, Uletrons International Ltd, Dongguan U-tek, Biologic Cosmetics Co., Ltd and Uletrons Switzerland Holdings Limited. All brands and product names listed herein are trademarks or registered trademarks owned by their respective holders and are hereby acknowledged and recognized as such. ©Copyright by Uletrons, Uletrons Switzerland AG, Uletrons International Ltd, Dongguan U-tek Biologic Cosmetics Co., Ltd and Uletrons Switzerland Holdings Limited. All rights reserved.

簡中安全守則

為確保安全如操作正確，請先詳閱圖說及遵守以下的安全守則：

- 請勿使用任何清洁剂或液体来清洗本产品表面，本产品只可用于干布清洁。
- 本产品有独特烤漆保护，清洁时请勿使用任何腐蚀性溶液，否则可能导致外表造成损坏。
- 本机严禁自行修理、拆卸或改装，不当的改装可能导致电路短路，产品损坏甚至火灾，曾被擅自改装的产品，均不保修。若产品“空向锁”，请列明定置后单位获得售后服务。
- 任何边缘切割位、不平滑的表面、金属零件、配件或包装均有可能因意外而引起流血或受伤，请小心使用，不可将本产品置于口中。
- 请勿在潮湿或温度较高的地方（如浴室）使用本产品，请在较少尘土的位置使用本产品，不得暴露在诸如日晒、火烤或类似的高温环境中。
- 产品使用后请擦干，请勿存放在潮湿环境中。
- 本产品不防水，请勿将产品或液体放在产品，这可能损坏产品。
- 请勿将产品放在有强烈磁场或电流场的环境，否则可能导致产品发生故障。
- 请勿于危险的环境中使用时。
- 本产品弃置在明火中可能会引起爆炸。

